

| | |
|--------------|--|
| >+S02:03 | Add S02:03 |
| > | |
| S02:03+ | Confirmed. S02:00,S02:01,S02:02,S02:03 on |
| >+S02:04 | Add S04:00, a fifth product |
| > | |
| S02:00- | S02:00 disengages to make room prior to |
| S02:04+ | S02:04 enagaging |
| >DISCALL | The 'DISCALL' command disconnects all products |
| > | |
| S02:04- | S02:04 disengages |
| S02:03- | S02:03 disengages |
| S02:02- | S02:02 disengages |
| S02:01- | S02:01 disengages |
| E00:01- | E00:01 disengages |
| >DISABLE ALL | DISABLE ALL locks out all product select buttons. It also will prevent the 970 from accessing products. |
| >ENABLE ALL | ENABLE ALL turns all of the product select buttons back on. |
| > | |
| > | The following messages were generated by the user pressing buttons on the display. |
| > | |
| S03:00+ | Speaker group 3 prod 0 selected by button; same status message as follows command but no command was sent. |
| > | |
| S03:00- | Speaker group S03:01 was pressed by user causing S03:00 to disconnect and S03:01 to connect. Speaker modules normally behave like electronic modules to the user by only allowing 1 product at time to be selected. The user can select multiple products by pressing and holding a button longer than 1/2 second. |
| S03:01+ | |
| > | |
| S03:01- | S03:02 pressed briefly, disconnecting the currently selected product before it is added. |
| S03:02+ | |
| S05:01+ | Speaker Group 5 product 1 selected via push button attached to module. |
| >DISC S05 | DISC disconnects all devices in speaker group 5. |
| > | |
| S05:01- | |
| > | |
| E02:00+ | Electronic group 2 product 0 selected via push button attached to module. |
| >DISC E02 | DISC disconnects all devices in electronic group 2. |
| > | |
| E02:00- | |
| >MUTE | Mute is used for selecting multiple products inside of one audio mute/unmute bracket. Prompt changes to '=' as a reminder that mute is on. |
| =+S05:00 | |
| = | |
| S05:00+ | Select speaker group 5 product 0, |