

Magnolia Home Theater Headphone Demonstrator

39-MHT-HP4 8-Position Version




Audio Authority MHT HP4 8-Position Version




The display consists of two product shelves with headphone stands, and a media shelf, which has a music player housed in an acrylic enclosure. The player connects to an amplifier which has connections for all the headphones.

Unbox the shelves and install the headphone stands. Unwrap the headphones and place them on the stands.

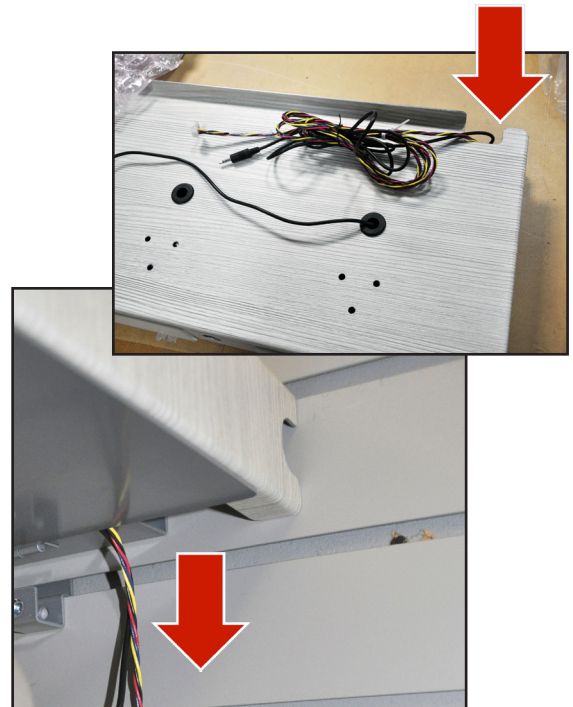

Attach the Upper Shelf (note the label underneath) at the proper height on the slat wall, allowing the wires to exit to the rear and down.

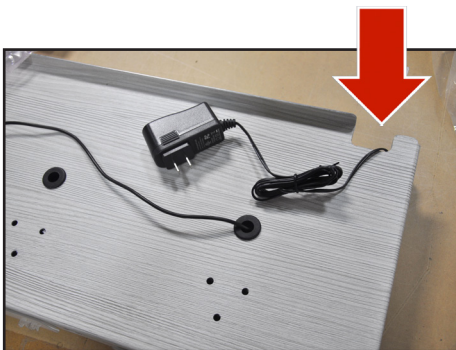

Install the Lower Shelf, allowing the power supply to exit to the rear and down.




Hang the Media shelf on the slat wall next to the lower shelf.

Route the power supply wire through the hole behind the Lower Shelf and Media Shelf. Feed it up through the hole in the Media Shelf, along with the end of the AC extension cord and connect the power supply to the extension cord.




Place the acrylic media housing on the Media Shelf and connect the Sony Walkman power cable to the charger and plug into the AC extension cord. Feed two audio cables down through the hole.



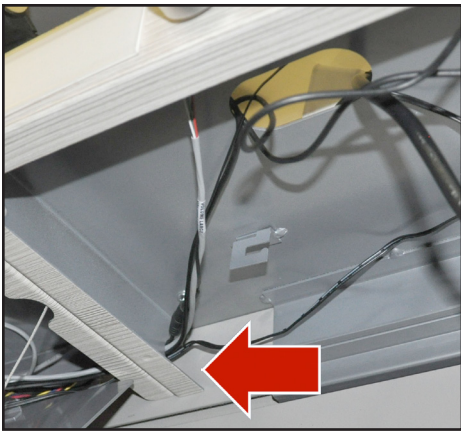

Feed three wires from the Media Shelf through the gap at the rear into the Lower Shelf.

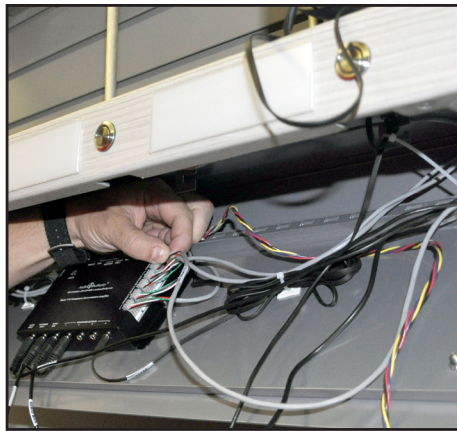

Connect two 3.5mm audio wires to the 1715 (see wire map). Connect the Control Port cable from the Media Shelf to the 1715 Control Port. Be careful to align all four pins to the plug.



Feed two wires from the Upper Shelf and connect them to the 1715 in the Lower Shelf. Be careful to align all four pins of the Expand Port to the plug.

Wire Map

Connect *from* Media Shelf:

1. 1715 Control Port
2. 1715 Customer Input
3. 1715 Audio Input



Connect *to* Media Shelf:

4. Power Supply

Connect *from* Upper Shelf:

5. Audio Bus
6. 1715 Expand Port

Switch Settings

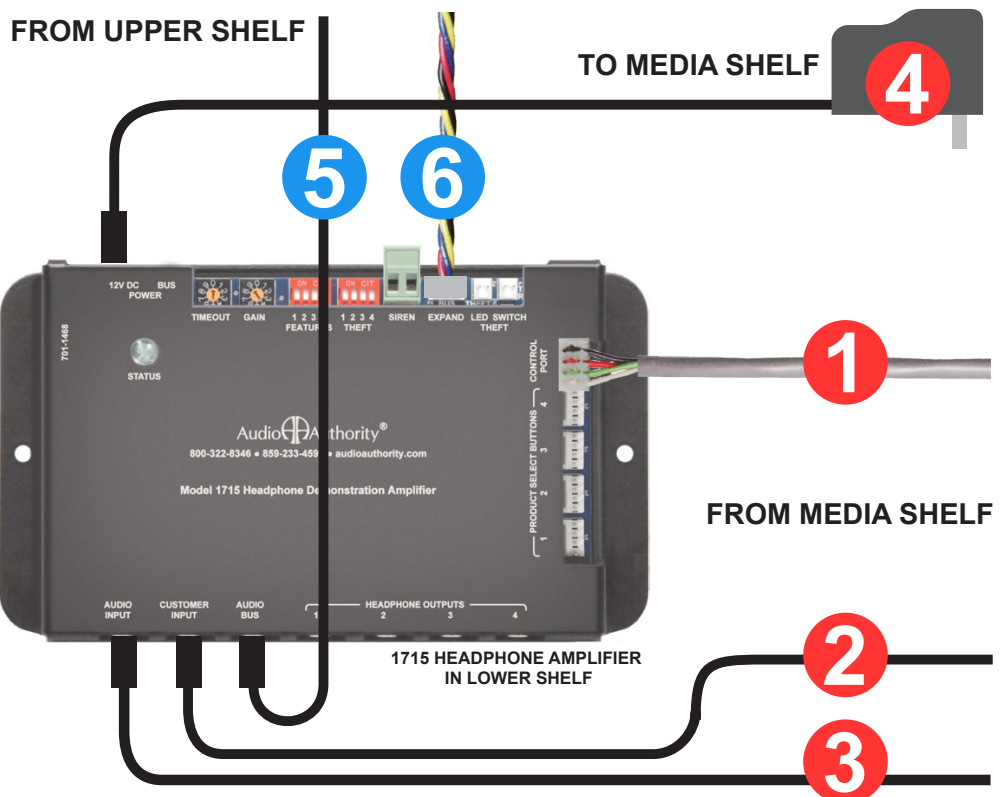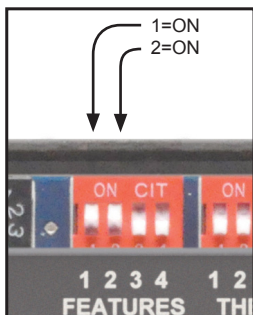



Use a hand screwdriver or long power screwdriver bit to attach the acrylic housing to Media Shelf. Start all four screws before tightening them.



Attach the AC extension cord to a cable tie tab, allowing some slack.




Coil and tie loose wires on the other cable tie tab.



Install the Wire Management Cover between the Upper and Lower Shelves, with the holes closest to the top.



Place the slat wall adapters behind the holes and start all four of the pucks before tightening them. Insert the graphic and install the graphic panel.

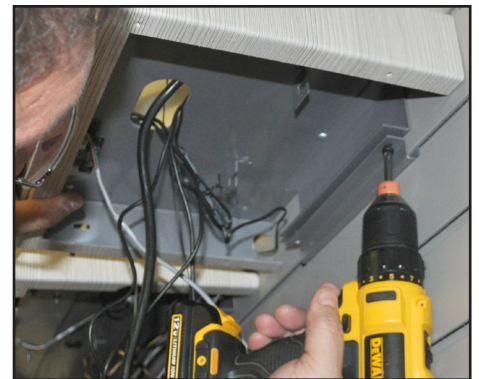

Install locking brackets under each shelf – tip the shelf up slightly to align the screws.



Attach the Lower Shelf to the Media Shelf using the nut and 1/2 inch screw.



Connect the extension cord to an AC outlet. Start audio on the music player. Press a product select button to listen to a pair of headphones. Adjust volume.



Connect a smartphone or MP3 player to the Customer Player jack.

Troubleshooting

If you do not hear audio, try the following while wearing the headphones:

- Make sure the music player has power and is playing music.
- Turn the volume control knob to adjust volume.
- Check the audio connection from the player to the 1715 and the other connections shown in Figure 4.
- Check the headphone connections to the 1715 amplifier. (The cords are attached permanently.)
- Try a different pair of headphones. If only one pair of headphones does not work, the cable may be faulty.



Player should be in DEMO mode.



Screw shut the bottom of the Lower Shelf, checking for wires that may be pinched in the gap.



Attach the bottom cover to the Media Shelf with four screws provided. It may be helpful to clear each hole with a screw first, then install the panel.



Test all the headphones once more; the installation is complete.

