

User Manual

Model 1816 Serial Distributor




Audio  Authority®

Model 1816 Serial Distributor

The Audio Authority® 1816 RS-232 Distributor provides a way to broadcast RS-232 serial commands. Each 1816 sends serial commands to up to six serial devices.



COMPATIBLE WITH
BRIGHTSIGN® MEDIA
PLAYERS

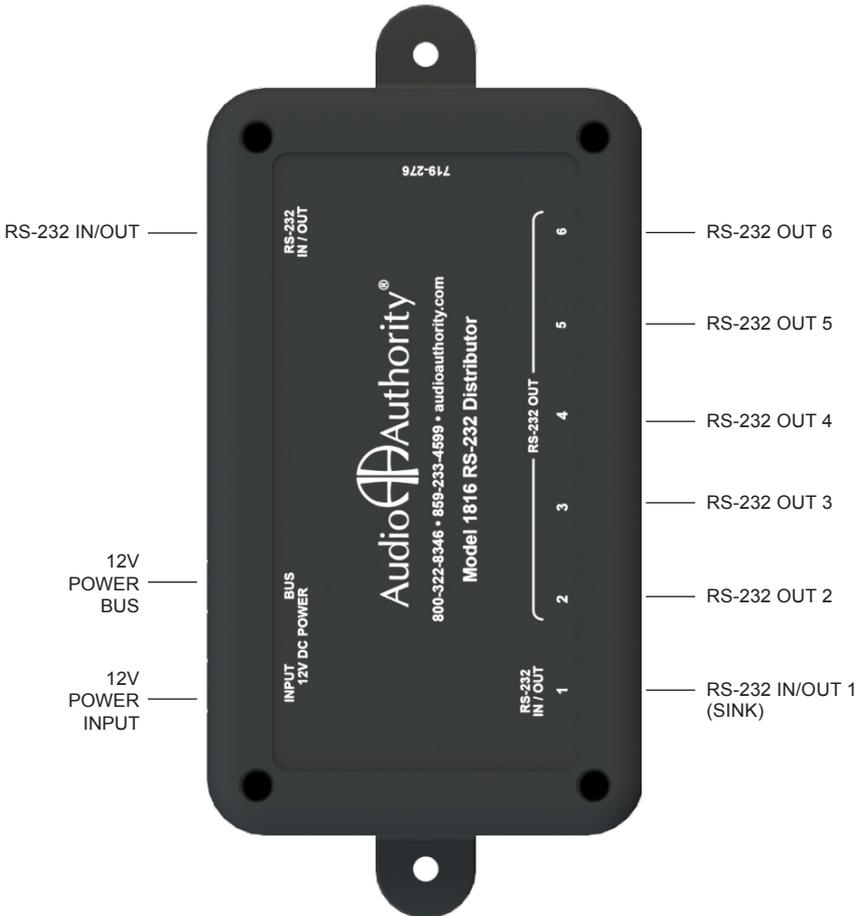

Package Contents

Before installing this product, please check the packaging and make certain the following items are contained in the shipping carton:

- 1816 Serial Switch Controller
- DC Power Adapter
- User Manual

RS-232 Ports

RS-232 ports connect via 3.5mm cables. The Model 1816 receives RS-232 commands on the input side, and echoes the incoming data to 6 output channels simultaneously. Position 1 is capable of receiving feedback from a connected sink device and passing data back to the source.

Power


Connect the 12V power supply (included) to the jack marked Power Input. The Power Bus may be used to power more Audio Authority compatible devices within the power supply's capacity by using an 801-077 power extension cable.

Installation

- Attach the player and the 1816 modules to a flat surface with the screws provided.
- Connect a 3.5mm cable from the 1816 RS-232 IN/OUT to the source, such as a BrightSign media player. Connect 3.5mm cables from the numbered (1-6) distribution ports to the RS-232 ports on the sink devices.
- Connect the power supply to AC power, then to the 1816 power port.
- Call Audio Authority with questions that are not addressed in this manual.

1816 Example System:

A BrightSign media player sends serial commands to TVs, receiving feedback from position 1.

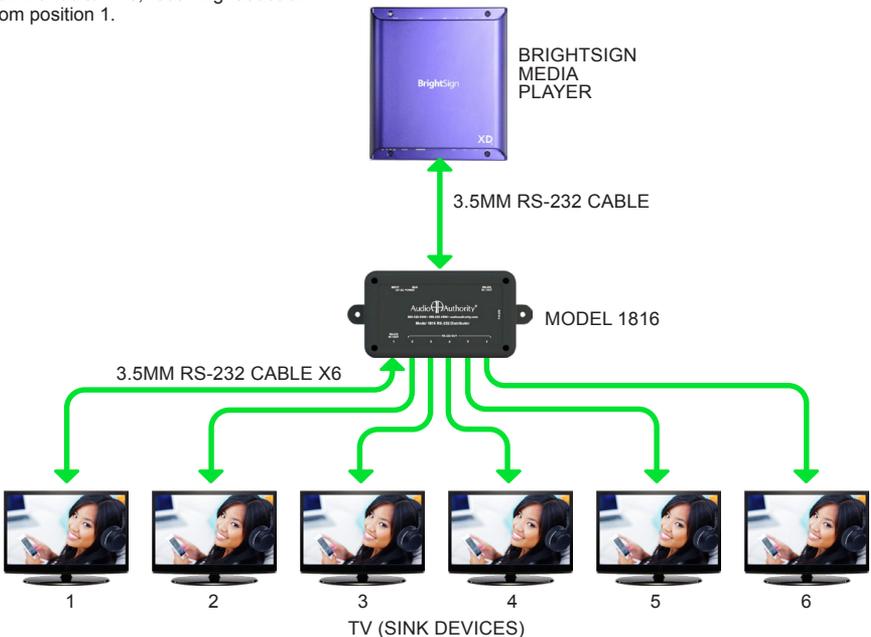

Audio  Authority®

2048 Mercer Road, Lexington, KY 40511-1071 USA
800-322-8346 • 859-233-4599 • Fax: 859-233-4510
support@audioauthority.com • www.audioauthority.com

752-731
Rev. 20180328