

# Home Theater Controller Model C-1024A

The C-1024A makes it possible for multiple sound and video components to respond to the commands issued by a single Pronto® or Harmony 880 learning remote control. Small enough to be easily hidden, the C-1024A is designed for placement behind the TV in the home theater room. Only the small IR sensor remains visible near the front of the TV where it receives the remote control commands. The C-1024A communicates with the Bose® music center (LIFESTYLE® 20, 25 and 30) or the MRI (LIFESTYLE® 40 and 50).

## Setting up the C-1024A IR Codes

Before you begin the installation, you must acquire the IR codes for your remote control. You can download the commands file directly from the Pronto® website.

## Installation

The C-1024A communicates with the Bose® music center or the MRI and also receives IR signals. Therefore, placement must be carefully considered. Keep in mind:

- The C-1024A and music center must be within 5 feet (1.5 m) of one another.
- The IR sensor should be mounted on the TV or other convenient place.

### Carton Contents

- Model C-1024A
- Serial data cable
- IR sensor
- Power pack

## Connecting the cables to the C-1024A

### 1. Connecting the music center cable:

- Insert one end into the jack marked TTL on the front of the C-1024A (see diagram).
- Insert the other end of that cable into the SERIAL DATA jack on the back of the LIFESTYLE® Music Center or Multi-Room Interface (MRI).


### 2. Set Feature Switch #1 for the type of system:

- For use with a LIFESTYLE® 20, 25 and 30, set switch #1 to the up position.
- For use with a LIFESTYLE® 40/50 (MRI), set switch #1 to the down position.

### 3. Connecting the IR sensor:

- Insert the connector into the IR SENSE jack on the front of the C-1024A.
- Decide where to place the IR sensor on or near the TV. Remove the protective strip from its adhesive surface and affix the sensor to a flat, clean, and dry surface. The sensor carries IR signals issued by the remote control to the C-1024A, which can be hidden from view, behind the TV.

*(Instructions continue on reverse side.)*

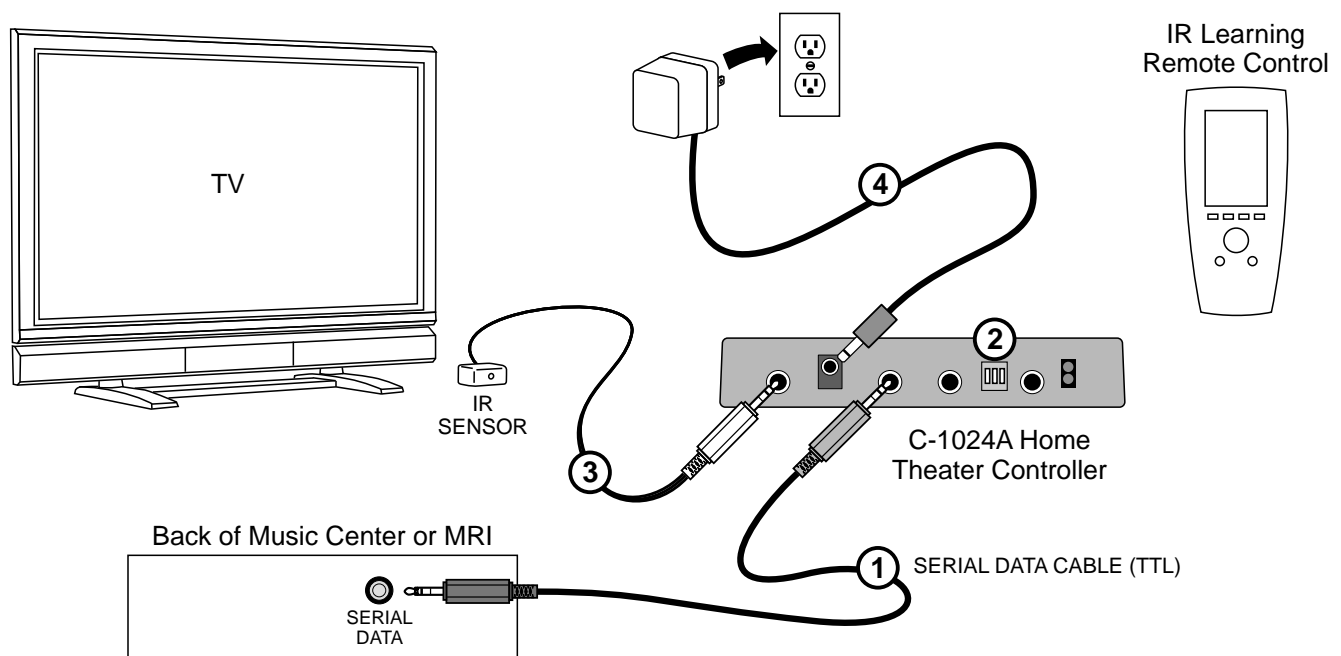

4. Connect the power pack:

- Insert the small connector end into the POWER jack on the back of the C-1024A.
- Plug the power pack end into a nearby wall outlet. The power light should come on (the upper of the two LEDs on the rear of the C-1024A) when the C-1024A receives power.

**List of Available IR Commands:**

**LIFESTYLE® 20, 25 & 30:**

Zone 1 performs all of the following commands. Zone 2 does not perform commands marked with an \*, and can only function for speaker "A."

FM/AM  
CD  
Video1  
Video2  
AUX  
Tape  
Mute  
Power (OFF)  
Volume Up/Down  
Preset Up/Down  
Seek Up/Down  
\*Surround Volume Up/Down  
\*5 Channel Sound Stage  
\*3 Channel Sound Stage  
\*2 Channel Sound Stage

**CD player controls:**

Play  
Stop  
Pause  
Next Disc  
Fast Forward/Reverse  
Track Up/Down  
Random toggle mode

**LIFESTYLE® 40, 50 Mode:**

Room A performs all of the following commands. Rooms B, C, and D do not perform commands marked with an \*.

FM  
AM  
CD  
Video1  
Video2  
AUX  
Tape  
Mute  
OFF  
Volume Up/Down  
Preset Up/Down  
\*Surround Volume Up/Down  
\*Center Volume Up/Down  
\*5 Channel Sound Stage  
\*3 Channel Sound Stage  
\*2 Channel Sound Stage  
\*1:5 On/Off  
\*DRC On/Off  
\*FEQ On/Off

**CD player controls:**

Play  
Stop  
Pause  
Disc Up/Down  
Fast Forward/Reverse  
Track Up/Down  
Random tracks on Disc  
Random all tracks on all Discs



2048 Mercer Road, Lexington, Kentucky 40511-1071

Phone: 859-233-4599 • Fax: 859-233-4510

Customer Toll-Free USA & Canada: 800-322-8346

Website: <http://www.audioauthority.com>